

# TRIUMPH TR6 INSTALLATION GUIDE


Sedan Firewall, Floor, Trunk, Kick/Quarter Panels, Doors

Make \_\_\_\_\_

Model \_\_\_\_\_

Year \_\_\_\_\_

Part # \_\_\_\_\_

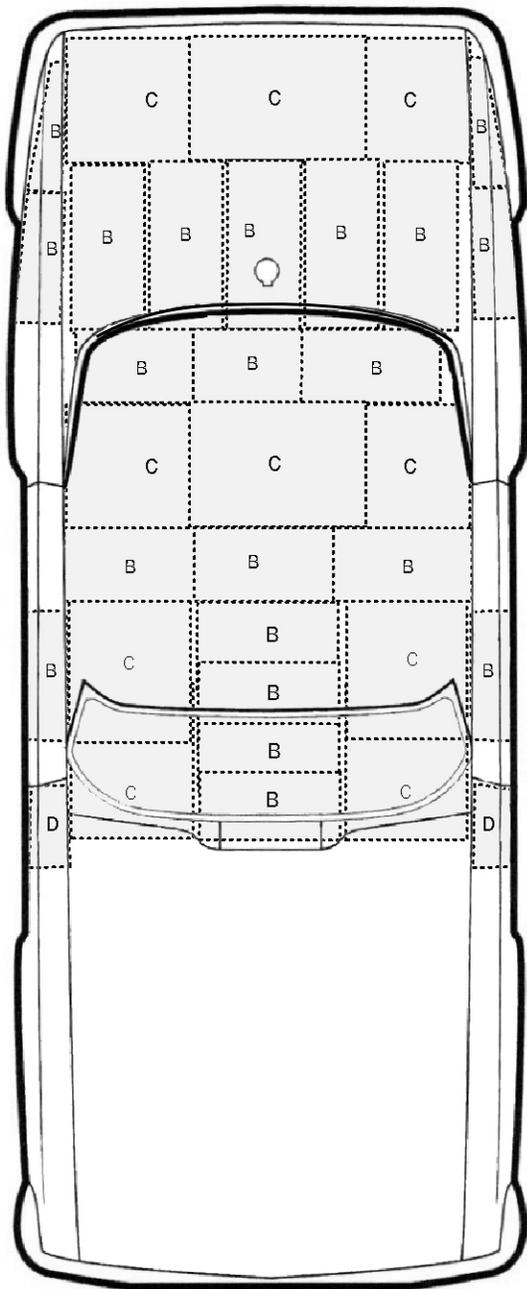

- A Hushmat Ultra 24" x 48"
- B Hushmat Ultra 12" x 23"
- C Hushmat Ultra 18" x 32"
- D Hushmat Ultra 12" x 12"

Note: Use 12" x 23" sheets for trim to fill in gaps between large sheets to cover 100% of surface for highest thermal and sound benefit.



This schematic provides an installation guide for your vehicle. It is not intended to reflect the exact dimensions of your Make, Model and Year vehicle.

© 2015 RMD LLC dba HushMat™. All Rights Reserved



[www.hushmat.com](http://www.hushmat.com)