

# TRIUMPH TR3 INSTALLATION GUIDE


Sedan Firewall, Floor, Trunk, Kick/Quarter Panels, Doors

Make \_\_\_\_\_

Model \_\_\_\_\_

Year \_\_\_\_\_

Part # \_\_\_\_\_

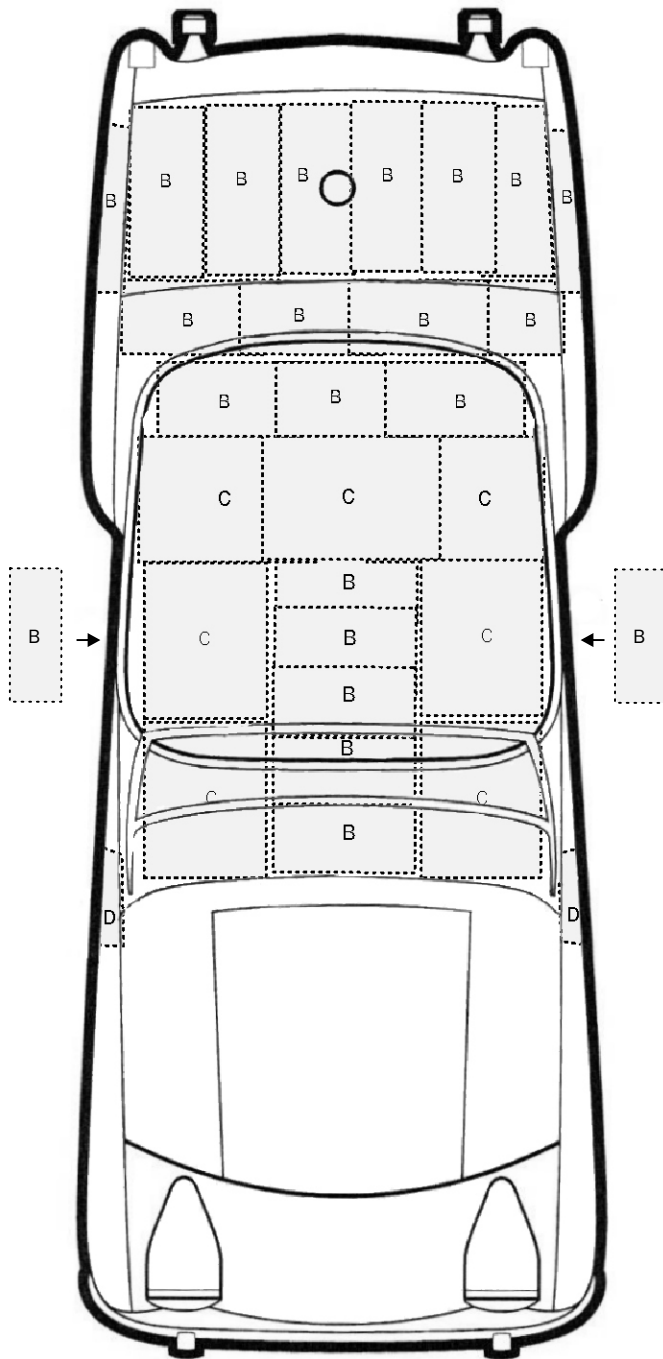

- A Hushmat Ultra 24" x 48"
- B Hushmat Ultra 12" x 23"
- C Hushmat Ultra 18" x 32"
- D Hushmat Ultra 12" x 12"

Note: Use 12" x 23" sheets for trim to fill in gaps between large sheets to cover 100% of surface for highest thermal and sound benefit.

**HushMat**<sup>®</sup>

This schematic provides an installation guide for your vehicle. It is not intended to reflect the exact dimensions of your Make, Model and Year vehicle.

© 2015 RMD LLC dba HushMat™. All Rights Reserved

**#1**  
Rated **1** Made in the USA  
OEM-APPROVED

[www.hushmat.com](http://www.hushmat.com)